



Removing Back Cover


Tools used in this guide

- [Phillips #0 Screwdriver](#)



Step 1 - Remove Back Cover

- Remove the six external screws from the camera using a #0 Phillips screwdriver.
- After removal of screws, the bottom of back external case will automatically loosen from camera.
- Be careful to make sure the screws don't fall on the ground or else they will be difficult to find.

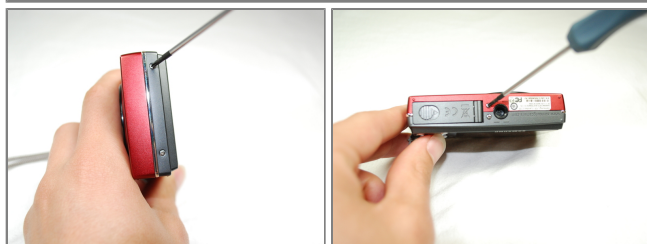




Step 2


- Open battery cover and remove battery.



Step 3


- Slide fingernail or wedge from bottom to top on right side of camera.

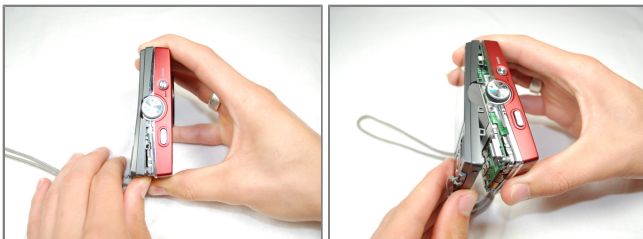

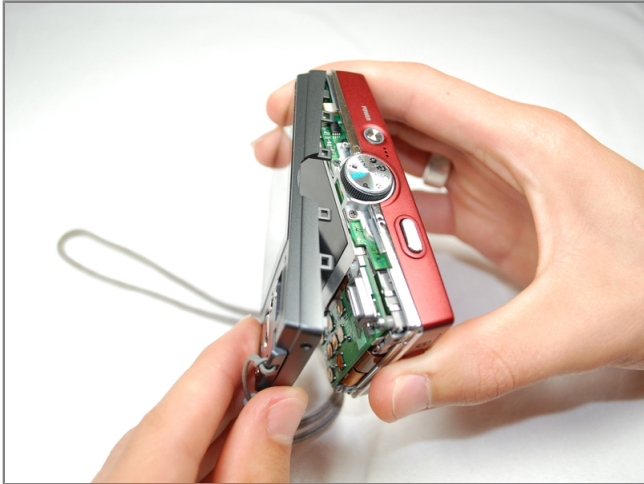

Step 4

- Apply pressure on the top right corner and pull back external over off.
- If it sounds like it is starting to crack, keep pulling. It will come off clean.

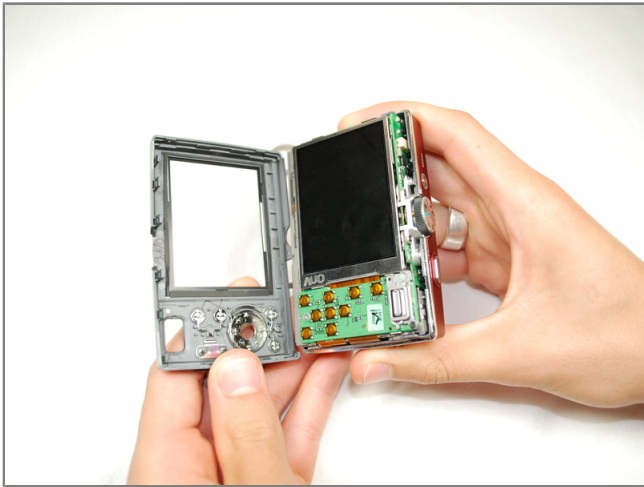

Step 5

- Pull off back cover.
- Some parts behind back cover will fall out.

